


Laying of the Mat, Installing and Cutting Kerlite

Laying of SILENT Mat

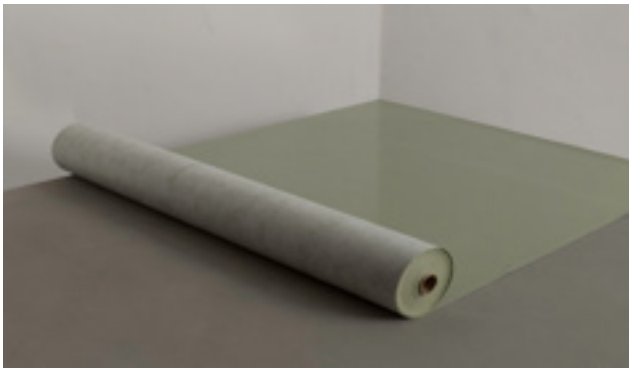


4/1

Lay the mat starting from the corner of the space.

Cut to size.


Position the Kerlite Slabs

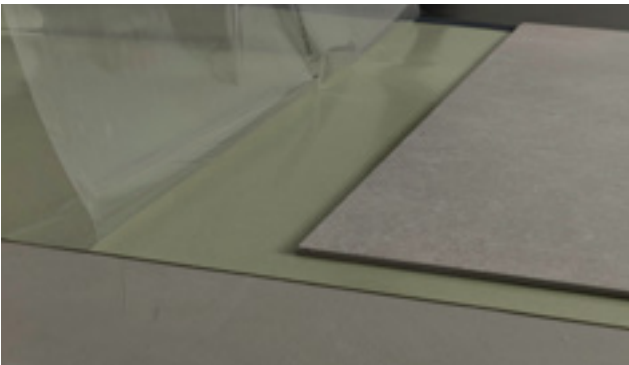

4/2

DO NOT remove completely the protective film. The film must be removed gradually while the Kerlite slabs are being laid.

Lay the Kerlite slabs, using spacers to distance them from each other. The spacers will not be removed, but rather covered by the grout so be sure to push them down as far as possible.

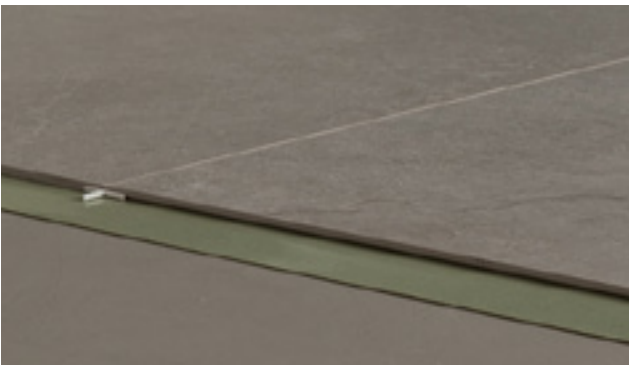

Cut to size. Around the perimeter of the room, maintain a distance from the walls of approximately 5mm. This outer joint will then be covered by the skirting or can be filled with silicone like a normal grout line.



KERLITE EASY MUST BE LAID EXCLUSIVELY WITH A CONTINUOUS GROUT LINE, WITH THE EXCEPTION OF THE 20X180 CM, 30X24 CM, AND 33X300 CM SLATS, WHICH CAN BE LAID WITH A STAGGERED GROUT LINE.

Cutting Kerlite Slabs

For information regarding the cutting of the slabs refer to the instructions in the Kerlite Technical Manual
It is important to note that L-shaped slabs and slabs with holes drilled through cannot be used with Kerlite Easy.

